


Boston Whaler - 13' Wood Locating Diagram - All Models

DECIMAL TOLERANCES ± EXCEPT AS NOTED
 ANGULAR TOLERANCES ± EXCEPT AS NOTED
 FRACTIONAL TOLERANCES ± EXCEPT AS NOTED

KEY


- (A) 2" x 2" x 1/2" ply on \odot of wire hole.
- (B) 3 1/2" x 12" x 3/4" ply. as noted.
- (C) 3/4" x 7/8" pine, 90" long from stern bulkhead.
- (D) 5" x 7 1/4" x 1/2" ply. behind handgrip
- (E) 16" high x 22" wide at top x 7 1/2" wide at bottom plywood, full Transom thickness.

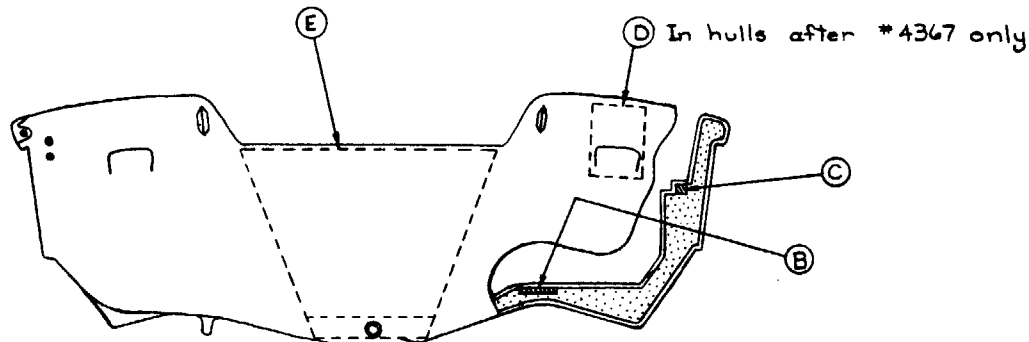

TRANSOM VIEW

Transom wood continues all the way to bottom of transom only in boats without center handgrip.

(A) In hulls after #4106 only

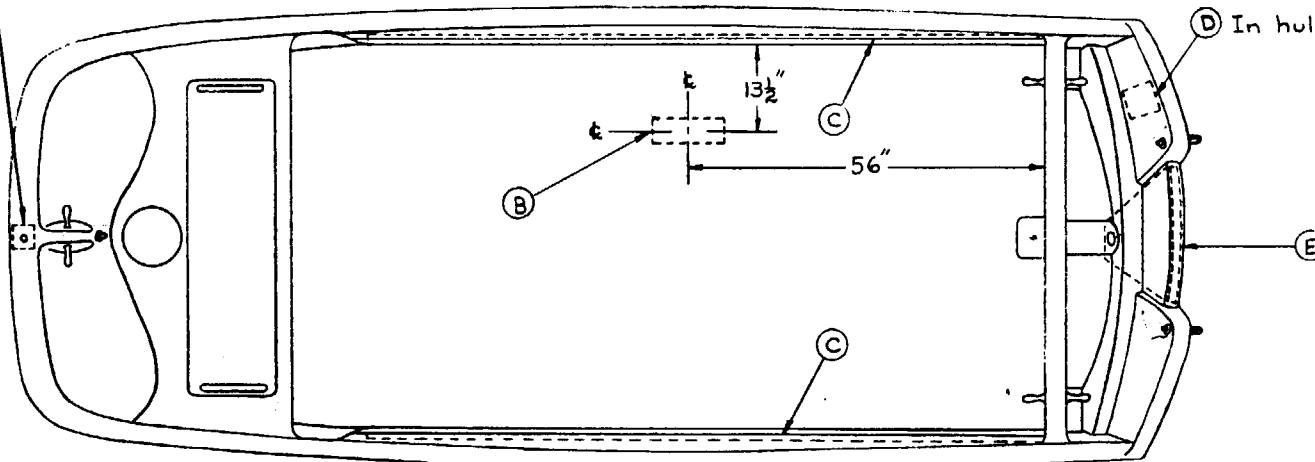

TOP VIEW

DWG. No. 15-9

DWG. NO. 15-9

ENGINEERING DEPARTMENT

FISHER-PIERCE
 COMPANY, INC.

1149 Hingham St., Rockland, Mass.

TITLE

SCALE	DATE	DRAWN	CHK'D	APP'D
None	6/17/66	JEB	JY	RJD

MATERIAL

TREATMENT OR FINISH

DISTRIBUTION CODE

REVISION

CODE	DESCRIPTION	DATE	BY	APP'D
A	Completely Redrawn original dated 2/13/63 lost	6/17/66	JEB	RJD
B	Cut-away Trans. View to show (B) and (C) wood.	7/22/66	JEB	RJD